


Epson® PowerLite® 62c/82c

Quick Setup




1 *Unpack the projector*


You should have the following items:

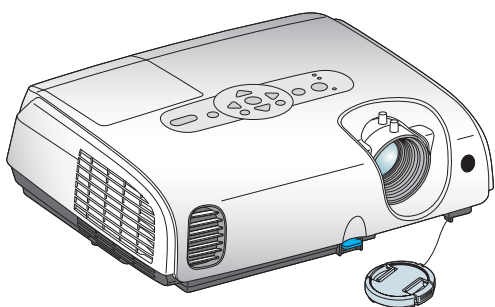

Projector

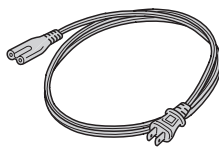

Power cord

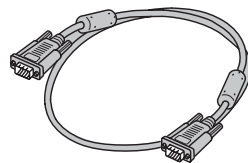

Computer cable




Projector
remote control



Password protect
sticker



User's Guide
CD-ROM

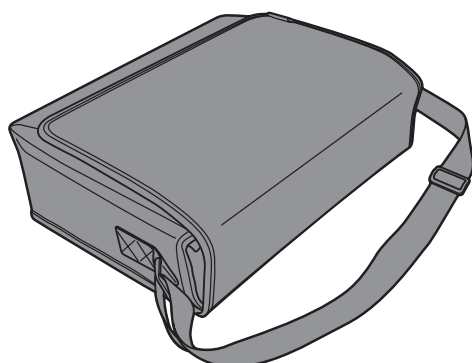


Carrying case

2 *Connect your video source*

The projector has 4 video connectors, as shown below. Each one requires a different type of cable. A computer cable is included. You can purchase optional video cables through Epson or at local electronics stores. You can connect up to 4 video devices and use the remote control to switch among them.


- 1 Check the connectors on your video equipment. If more than one connection is available, choose the one that provides the best quality. The projector connectors from highest to lowest quality are Computer1(Component) or Computer2(Component), S-Video, and Composite Video.
- 2 Make sure you have the right cable(s) for the connection(s) you want to use, and the cables are long enough for your setup. If you need a cable longer than the standard 6 to 10 feet, you may need a distribution amplifier. (See the back page for accessory information.)
- 3 Before you connect your equipment, make sure everything is turned off.
- 4 Connect your video equipment to the projector.

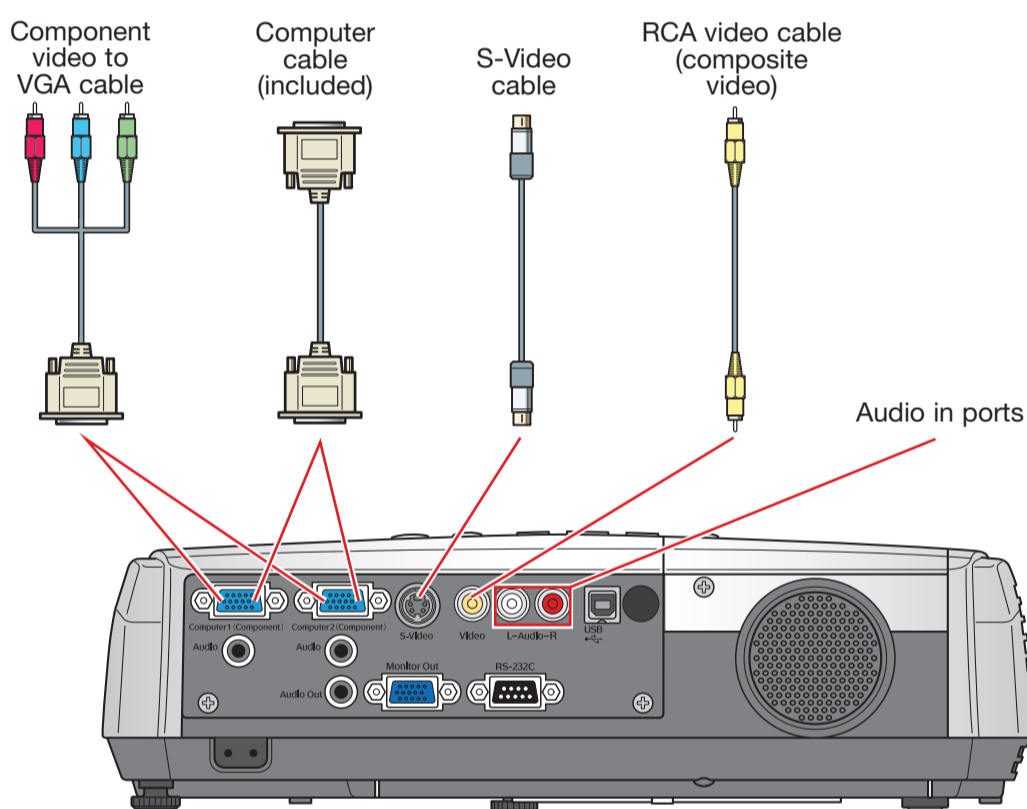

NOTE To play back audio through the projector, you can connect an audio cable from your video device to the audio in ports on the projector. See the *User's Guide* on your CD-ROM for instructions.

3 *Set up the remote control*

- 1 Remove the battery cover.
- 2 Insert the batteries.
- 3 Replace the battery cover.

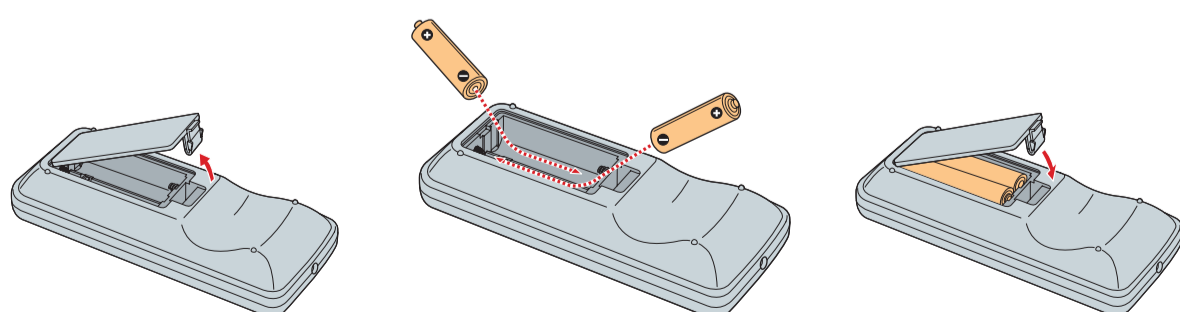

The remote control is ready for use.

Choosing a location

The projector supports 4 viewing setups. Choose the best one for your environment. If you install the projector in a rear or overhead position, you'll need to choose the correct projection option, identified below, from the Extended menu. See the *User's Guide* on your CD-ROM for instructions.



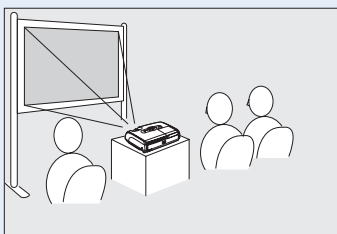



Table
Convenient for temporary front projection.
Choose **Front** from the menu.

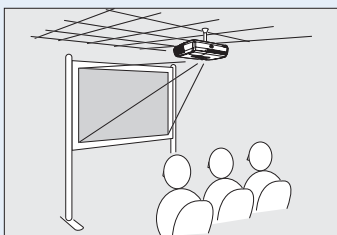

Ceiling
Professional installation recommended.
Choose **Front/Ceiling** from the menu.

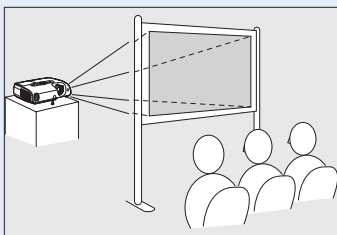


Rear
For permanent installation behind a translucent screen. Choose **Rear** from the menu.

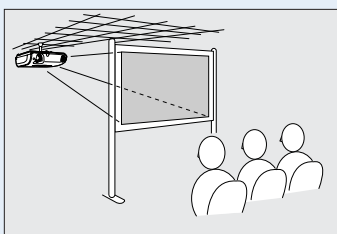


Rear/Ceiling
Professional installation behind a translucent screen recommended. Choose **Rear/Ceiling** from the menu.

The distance between the projector and the screen determines the size of the image. The diagram below shows approximately how big your image will be, based on where you set up the projector.

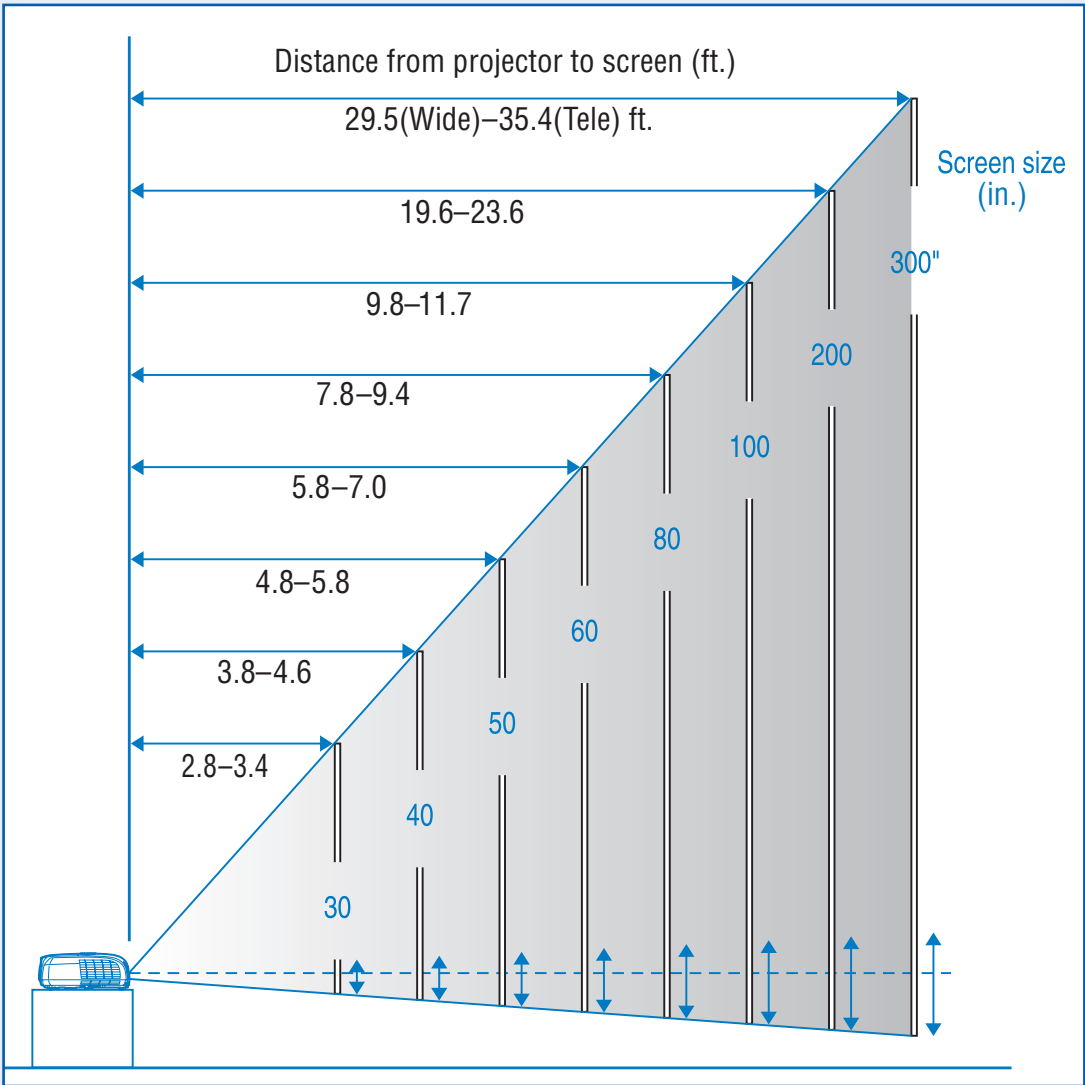


4 *Plug in and turn on*


- 1 Press in the tabs and remove the lens cover.

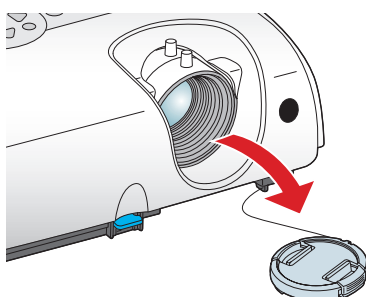

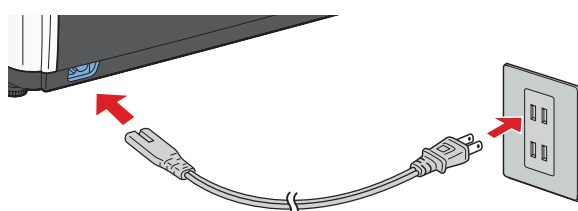


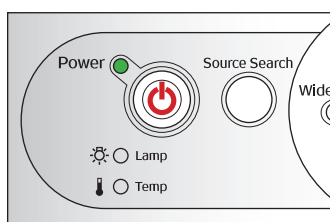
- 2 Connect the power cord to the projector and plug the other end into an electrical outlet.

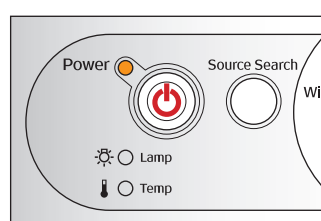

The  power light turns orange.



- 3 If you are connecting a device other than a computer, such as a DVD player, turn on your equipment. (If you are connecting to a computer, don't turn it on yet.)
- 4 Press the  **Power** button on the projector or remote control. You hear a beep, the  power light flashes green, and the projector lamp comes on in about 4 seconds. The  power light stays green.






 
- 5 If you are using a computer, turn it on now.
- 6 Start your video or presentation. If you have connected more than one video source, press the **Comp1**, **Comp2**, **S-Video**, or **Video** button on the projector remote control to select the one you want to watch.

NOTE If you connected a notebook computer and no image is being projected, you may need to set up the notebook to display on an external device. See the **Troubleshooting** section for instructions.

Source buttons



Turning off the projector


- 1 When you're finished using the projector, first turn off the video source.
- 2 Press the  **Power** button on the projector or remote control.
- 3 When you see the confirmation message, press the  **Power** button again. The projector beeps twice, the lamp is turned off, and the  power light turns orange.
- 4 When the  power light is a steady orange, unplug the projector.

With Epson's exclusive Instant Off™ technology there's no cool-down period, so you can pack up and go immediately after turning off the projector.


Caution: Never unplug the projector when the  power light is green or flashing orange.

5 *Adjust the image*



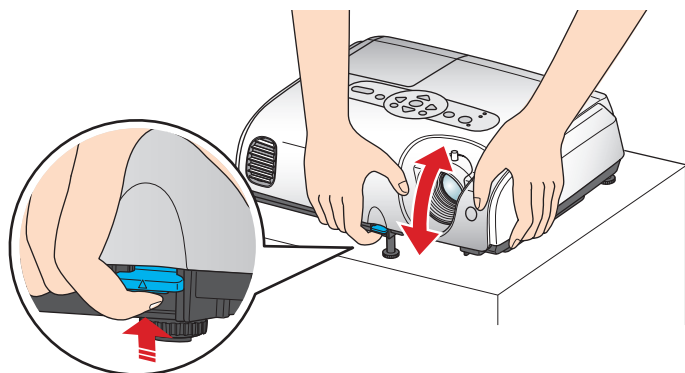

- 1 To raise the image, press the foot adjust button and lift the front of the projector. Release the button to lock the foot in the position you want.

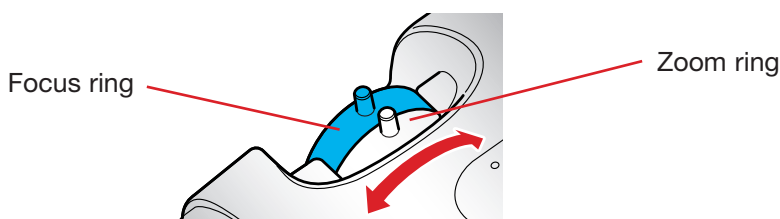

- 2 Rotate the focus ring to sharpen the image.



- 3 Rotate the zoom ring to reduce or enlarge the image. (You can also move the projector closer to or farther from the screen.)

- 4 If your image looks like  or , first make sure the projector is facing the screen squarely. Then, if necessary, press the  and  buttons on the projector's control panel until the image is corrected.

- 5 To select the best color mode, press the **Color Mode** button on the projector's remote control repeatedly to move through the options.

See your *User's Guide* on the CD-ROM for more information about image adjustments.



Color Mode button

6 *Install your User's Guide and register your projector*

- 1 Insert the CD-ROM in your drive. If the installer doesn't open automatically, double-click the **Epson** CD-ROM icon, then double-click the **Epson** installer icon.
- 2 Choose **English**, then follow the on-screen instructions to register your projector.

NOTE You can also register at www.epson.com/webreg.

- 3 When you are done registering, click **User's Guide** to install it.

If you don't already have Adobe Reader, click **Adobe® Reader®** and follow the on-screen instructions to install it.

- 4 When the guide is installed, double-click the **User's Guide** icon on your desktop to open your *User's Guide*.

Register today to get product updates, special promotions, and customer-only offers.

Where to get help

Telephone Support Services

To use the Epson PrivateLine® Support service, call (800) 637-7661 and enter the PIN on the included Epson PrivateLine Support card. This service is available 6 AM to 6 PM, Pacific Time, Monday through Friday, for the duration of your warranty period. You may also speak with a projector support specialist by dialing one of these numbers:

U.S.: (562) 276-4394, 6 AM to 6 PM, Pacific Time, Monday-Friday

Canada: (905) 709-3839, 6 AM to 6 PM, Pacific Time, Monday-Friday

Toll or long distance charges may apply.

Electronic Support Services

Epson provides technical assistance through electronic support services 24 hours a day at <http://support.epson.com>. For tips, templates, and training for developing successful presentations go to <http://www.presentersonline.com>.


 
Accessories

You can purchase video cables, screens, carrying cases, or other accessories from an Epson authorized reseller. Please call 800-GO-EPSON (800-463-7766) for product information and to find the nearest authorized reseller. To purchase online, visit the Epson StoreSM at www.epsonstore.com (U.S. sales only). In Canada, call (800) 463-7766 for dealer referral.

Troubleshooting

 
If you see a blank screen

If you see a blank screen or the No signal message after turning on your notebook, check the following:

- Make sure the  power light on the projector is green and not flashing and the lens cover is off.
- Try turning off the notebook and restarting it.
- If you've connected more than one computer and/or video source, you may need to press the **Source Search** button on top of the projector to select your video source. (Allow a few seconds for the projector to sync up after pressing it.)
- If you're using Windows®, hold down the **Fn** key and press the function key that lets you display on an external monitor. It may have an icon such as , or it may be labeled CRT/LCD. Allow a few seconds for the projector to sync up after pressing it.

If the projector and the notebook don't display the same image

If you're using a Windows notebook:

- On most systems, the  or CRT/LCD key lets you toggle between the LCD screen and the projector, or display on both at the same time.
- You might need to use the Display utility in the Control Panel to enable both the LCD screen and external monitor port. Check your notebook's manual or online help for details.
- If you have dual monitor support, you may need to uncheck the option to extend your Windows desktop in the Display Properties.

If you're using a Macintosh® PowerBook® with OS X:

1. From the Apple® menu, select **System Preferences**, then click **Display** or **Displays**.
2. Select **VGA Display** or **Color LCD**, click **Arrangement** or **Arrange**, and click **Mirror Displays**.